

PVC BALL CHECK VALVE PN10

ISO 9001:2008

BUREAU VERITAS
Certification



Size : DN 1"1/4 to 3"

Ends : Threaded female BSP

Min Temperature : + 0°C

Max Temperature : + 60°C

Max Pressure : 10 Bars

Specifications : Ball check valve

Vertical or horizontal position

With removable cap

Materials : PVC-U

PVC BALL CHECK VALVE PN10


SPECIFICATIONS :

- Ball check valve
- Vertical with ascendant fluid or horizontal position (respect the flow direction indicated by the arrow)
- Female / female BSP
- With removable cap
- Low head loss

USE :

- Water distribution and watering
- Min Temperature Ts : 0°C
- Max Temperature Ts : + 60°C
- Max Pressure PN : 10 bars

HEAD LOSS GRAPH :

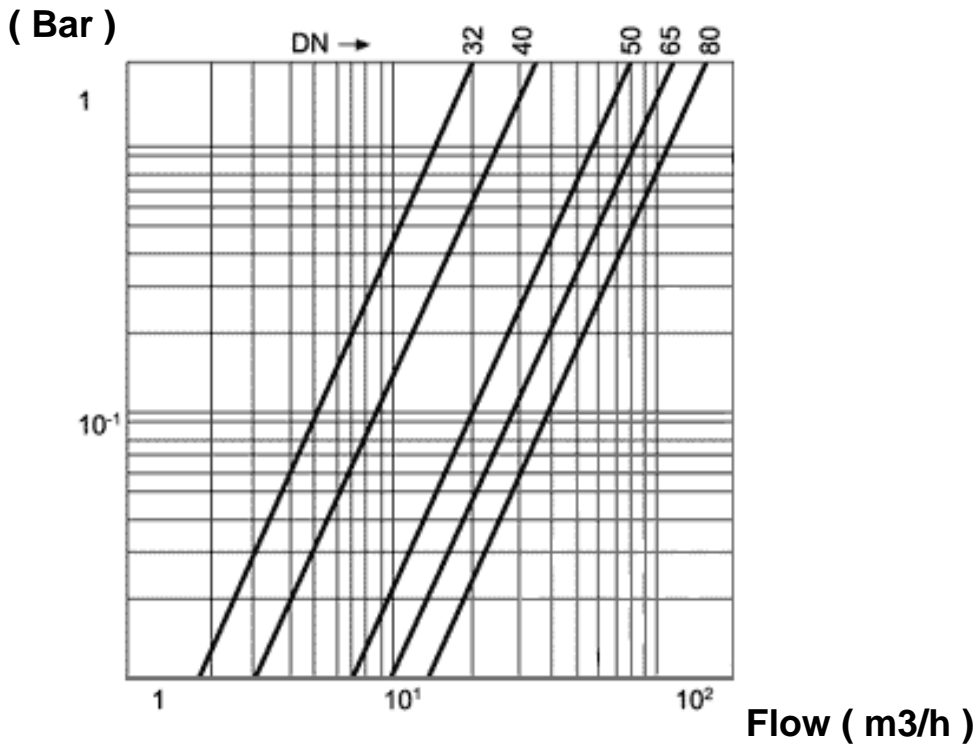


RANGE :

- Female / female threaded cylindrical BSP **Ref. 334** from DN1"1/4 to 3"

PVC BALL CHECK VALVE PN10


MATERIALS :

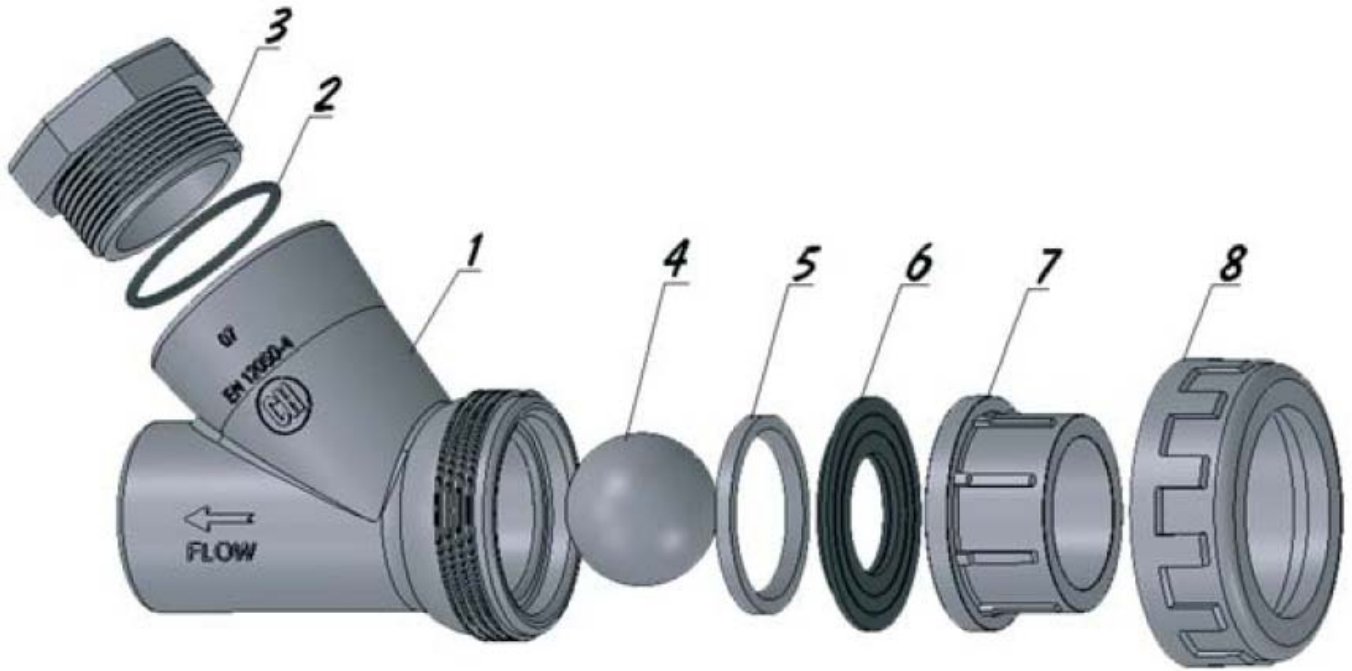

Item	Designation	Materials
1	Body	PVC-U
2	Bonnet gasket	EPDM
3	Bonnet	PVC-U
4	Ball	PVC-U
5	Ring	PVC-U
6	Gasket	EPDM
7	Ends	PVC-U
8	Nut	PVC-U

PVC BALL CHECK VALVE PN10

SIZE (in mm) :

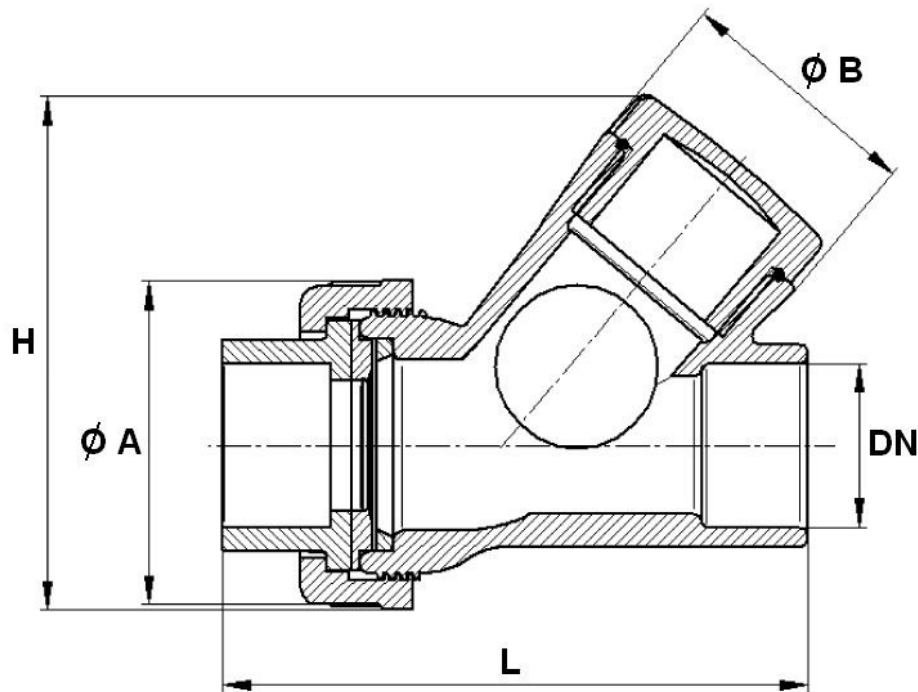

Ref.	DN	1"1/4	1"1/2	2"	2"1/2	3"
334	L	144	158	190	270	324
	H	127	158	181	238	286
	Ø A	81	99	112	154	178
	Ø B	61	71	90	114	137
	Weight (Kg)	0.413	0.693	1.148	2.411	4.121

PVC BALL CHECK VALVE PN10

STANDARDS :

- Fabrication according to ISO 9001 : 2008
- DIRECTIVE 97/23/CE : Products excluded from directive (Article 1, § 3.2)
- According to water pumping stations NF EN 12050-4
- Threaded BSP cylindrical ends according to ISO 228-1

INSTALLATION POSITIONS :

Vertical position (Ascendant fluid)



Horizontal position



ADVICE : Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.

PVC BALL CHECK VALVE PN10

INSTALLATION INSTRUCTIONS

GENERAL GUIDELINES :

- Ensure that the check valves to be used are appropriate for the conditions of the installation (type of fluid, pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.

INSTALLATION INSTRUCTIONS :

- **Before installing the check valves, clean and remove any objects from the pipes** (in particular bits of sealing and metal) which could obstruct and block the valves.
- **Ensure that both connecting pipes either side of the check valve (upstream and downstream) are aligned (if they're not, the valves may not work correctly).**
- **Make sure that the two sections of the pipe (upstream and downstream) match, the check valve unit will not absorb any gaps. Any distortions in the pipes may affect the tightness of the connection, the working of the check valve and can even cause a rupture.** To be sure, place the kit in position to ensure the assembling will work.
- Before starting the fitting, ensure that the threads and tapping are clean.
- **If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the check valve.**
- The theoretical lengths given by ISO/R7 for the tapping are typically longer than required, the length of the thread should be limited, and **check that the end of the tube does not press right up to the head of the thread.**
- When screwing the check valve, ensure that you only rotate on screwed side by the 6 ended side. Use an open ended spanner or an adjustable spanner and not a monkey wrench.
- **Never use a vice to tighten the fixings of the check valve.**
- Do not over tighten the check valve. Do not block with any extensions as it may cause a rupture or weakening of the casing.
- If there is a direction changing or if there's another material, it's better to take away the check valve so that it is outside the turbulence area (**between 3 and 5 times the ND before and after**).
- After a pump please refer to norm NF CR 13932 to install the check valve.