





((

Certificate 3.1

Size: DN 15 to 150 mm (NPS 1/2" to 6")

Ends: Flanges Class 150 (PN20) R.F.

Min Temperature : - 10°C Max Temperature : + 180°C Max Pressure : 20 Bars

Specifications: ISO 5211 mounting pad

PTFE filled with glass seat

Anti blow-out stem

Double antistatic device

Materials: Carbon steel ASTM A216 WCB

SPECIFICATIONS:

- Full bore
- · Anti blow-out stem
- Double antistatic device
- · PTFE filled with glass seat
- Handle with locking device up to DN50 (NPS 2")
- ISO 5211 mounting pad
- 2 pieces type (Split body)
- Hollow ball for DN150 (NPS 6")
- Black anti-corrosive finish, 3-5µ thickness

USE:

- · Chemical industries, petrochemical industries, hydraulic installation, heating and water distribution
- Min and max Temperature Ts: -10°C to + 180°C
- Max pressure Ps: 20 bars

RANGE:


Ball valve with carbon steel body Ref. 793 from DN 15 to DN 150 (NPS 1/2" to 6")

ENDS:


R.F. flanges Class 150 PN20

PRESSURE / TEMPERATURE GRAPH (STEAM EXCLUDED):


Pressure

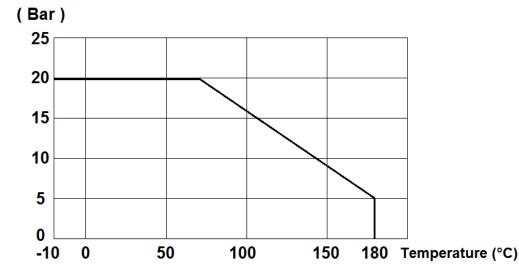


MATERIALS DN 15 - 50 (NPS 1/2" to 2") :

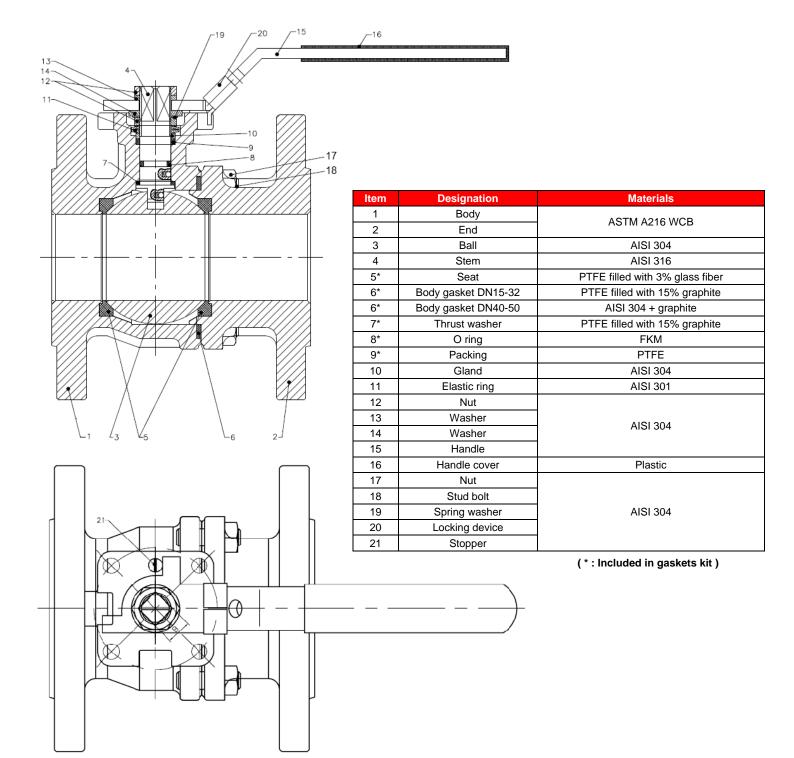

MATERIALS DN 65 - 100 (NPS 2"1/2 to 4") :

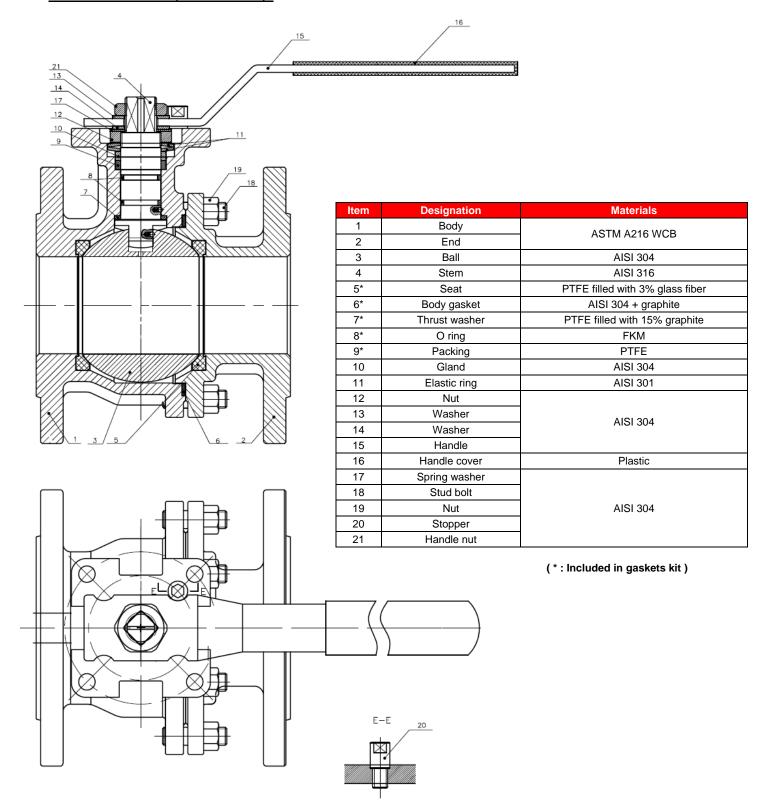


MATERIALS DN 150 (NPS 6"):

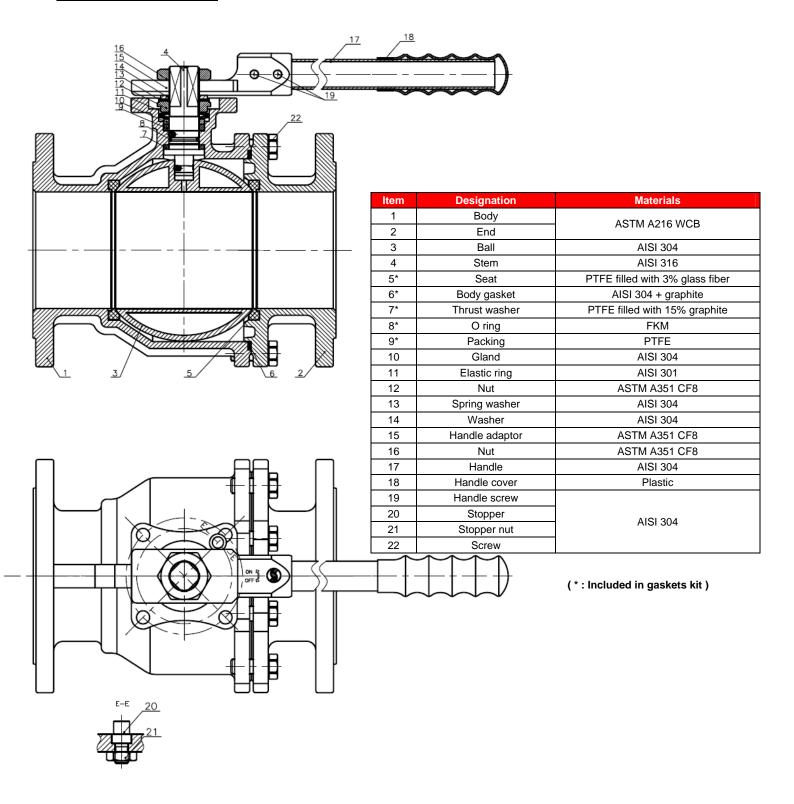

SIZE DN 15 - 50 (NPS 1/2" to 2") (in mm):


DN 15 - 50 (NPS 1/2" to 2")

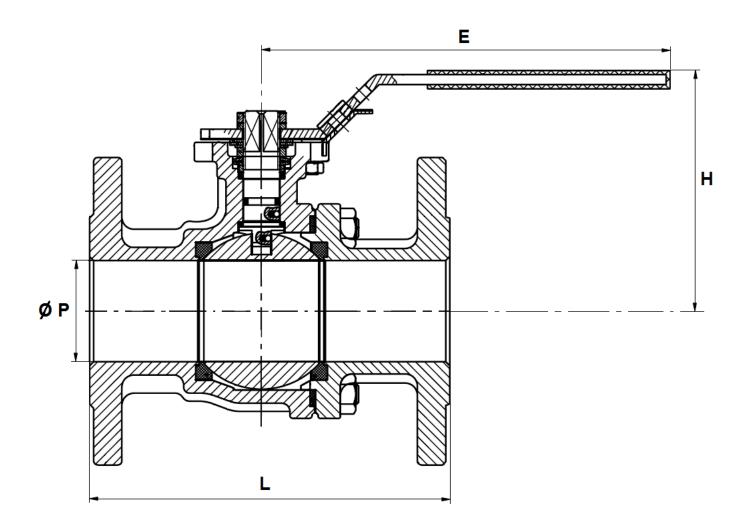

Ref.	DN	15	20	25	32	40	50
	NPS	1/2"	3/4"	1"	1"1/4	1"1/2	2"
793	ØΡ	15	20	25	32	40	50
	L	108	117	127	140	165	178
	Е	111.5	137.5	137.5	160	205	205
	н	75	82.5	87.5	107.5	108.5	116.5
	Weight (Kg)	1.58	1.84	2.85	3.65	6.3	8.15

SIZE DN 65 - 100 (NPS 2"1/2 to 4") (in mm):

DN 65 - 100 (NPS 2"1/2 to 4")

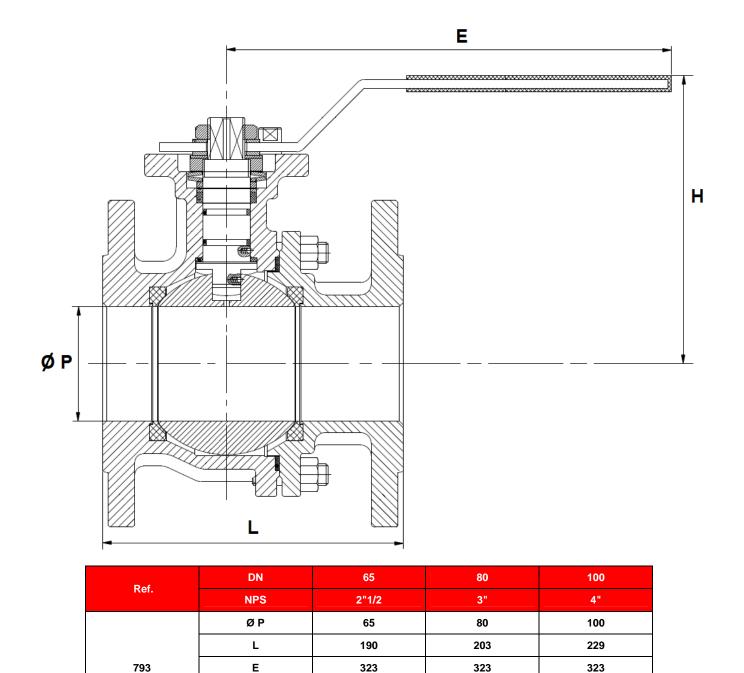

160

12.81

170

16.97

186


29

Н

Weight (Kg)


SIZE DN 150 (NPS 6") (in mm) :

DN 150 (NPS 6")

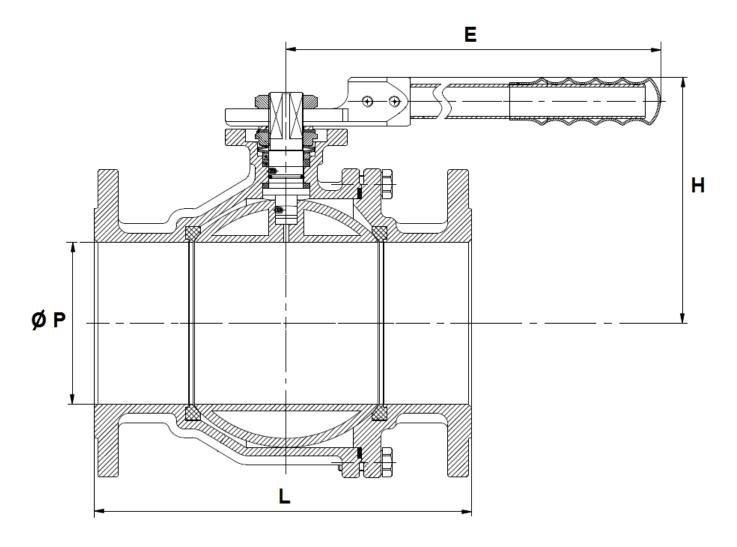


Dof	DN	150		
Ref.	NPS	6"		
	Ø P	150		
	L	394		
793	E	620		
	н	228		
	Weight (in Kg)	55.8		

ISO MOUNTING PAD AND STEM SIZE (in mm):

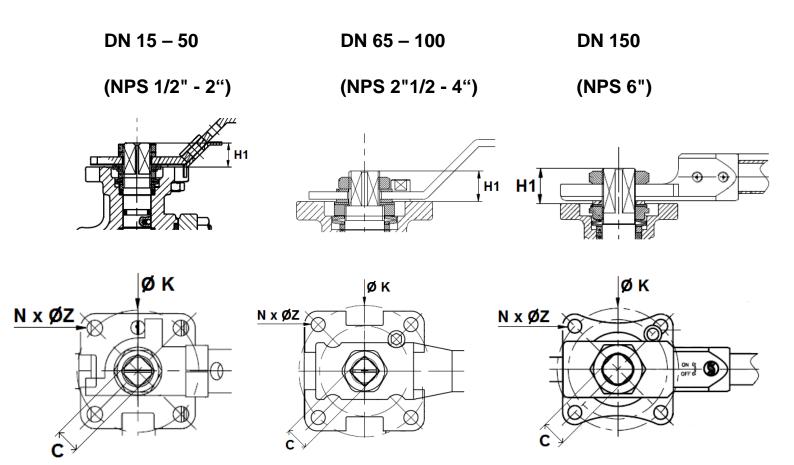

Ref.	DN	15	20	25	32	40	50	65	80	100	150
	NPS	1/2"	3/4"	1"	1"1/4	1"1/2	2"	2"1/2	3"	4"	6"
793	С	9	9	11	14	14	14	17	17	17	27
	øк	42	42	50	50	70	70	102	102	102	125
	ISO	F04	F04	F05	F05	F07	F07	F10	F10	F10	F12
	NxØZ	4 x 6	4 x 6	4 x 7	4 x 7	4 x 9	4 x 9	4 x 11	4 x 11	4 x 11	4x 14
	H1	11	9	10.5	14.5	14.5	14.5	21	21	21	34

FLANGES SIZE (in mm):

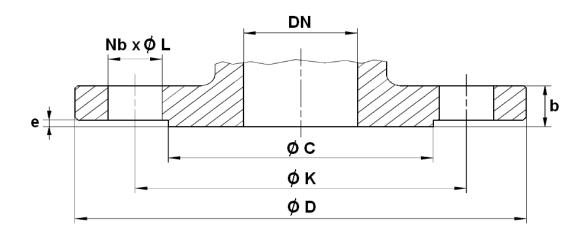

Ref.	DN	15	20	25	32	40	50	65	80	100	150
	NPS	1/2"	3/4"	1"	1"1/4	1"1/2	2"	2"1/2	3"	4"	6"
793	øс	35	43	51	64	73	92	105	127	157	216
	Ø D	89	98	108	117	127	152	178	190	229	279.4
	øк	60.5	70	79.5	89	98.5	120.5	139.5	152.5	190.5	241.3
	Nb x Ø L	4 x 16	4 x 19	4 x 19	4 x 19	8 x 19	8 x 22.2				
	b	11	11	12	13	15	16	18	19	24	26
	е	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6

TORQUE VALUES (in Nm without safety coefficient):

DN	15	20	25	32	40	50	65	80	100	150
NPS	1/2"	3/4"	1"	1"1/4	1"1/2	2"	2"1/2	3"	4"	6"
Torque (Nm)	6	8	10	14	20	30	36	60	95	210

STANDARDS:

• Fabrication according to ISO 9001 : 2008

• DIRECTIVE 97/23/CE : CE N° 0035 Risk Category II module D1

- Certificate 3.1 on request
- Designing according to EN 12516-1
- Tests according to API 598, table 6
- Class 150 PN20 R.F flanges according to ASME B16.5
- ISO 5211 mounting pad
- Length according to ASME B16.10 (EN 558 series 3 up to DN100, series 12 for DN150)

INSTALLATION INSTRUCTIONS

GENERAL GUIDELINES:

- Ensure that the valves to be used are appropriate for the conditions of the installation (type of fluid, pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.
- Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).

INSTALLATION INSTRUCTIONS:

- Before installing the valves, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the valves.
- Ensure that both connecting pipes either side of the valve (upstream and downstream) are aligned (if they're not,the valves may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the valve unit will
 not absorb any gaps. Any distortions in the pipes may affect the thightness of the connection, the
 working of the valve and can even cause a rupture. To be sure, place the kit in position to ensure the
 assembling will work.
- If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the valve.
- Tighten the bolts in cross.
- It's recommended to operate the valve (open and close) 1 to 2 times per year