

Ductile iron globe valve flanged PN16/25 for common fluids of 2<sup>nd</sup> group, steam, thermic fluid.

Stainless steel bellow and graphite gasket.

Anti-turn device to avoid the risk of torsion of bellows.

Pressure equalizing plug in DN200

Bolted bonnet and packing for an easy maintenance.

Compatible with explosive atmosphere, ATEX Zone 1&21 and Zone 2&22.













Size: DN15 to DN200

**Connection:** Flanged PN16/25 RF

Min Temperature: -10°C Max Temperature: +350°C

**Max Pressure:** 25 bars up to DN50 (16 bars over)

**Specifications:** Non rising stem

Stainless steel bellow Bolted bonnet and packing

Materials: Ductile iron EN GJS-400-18

#### **SPECIFICATIONS:**

- · Respect the flow direction indicated by the arrow
- Non rising stem
- Bolted bonnet and gland pack
- Stainless steel bellow
- Pressure equalizing plug in DN200
- Pressed seat in the body
- Anti-turn device to avoid the risk of torsion of bellows
- Flanges R.F. PN25 up to DN50, PN16 over
- RAL 9006 grey painting, 40µm thickness

### USE:


- $\bullet \;\;$  Common fluids of  $2^{nd}$  group , steam , thermic fluid
- Min and Max Temperature Ts: 10°C to + 350°C
- Max Pressure Ps: 25 bars up to DN50, 16 over ( see graph )
- $\Delta p$  16 bars max for DN125, 15 bars max for DN150, 16 bars max for DN200
- · Keep greased the stem

### FLOW COEFFICIENT Kvs (M3/h):

DN	15	20	25	32	40	50	65	80	100	125	150	200
Kvs ( m3/h )	3.8	7	10	19	35	43	60	110	146	210	300	670

## PRESSURE / TEMPERATURE GRAPH:


## Pressure (Bar)

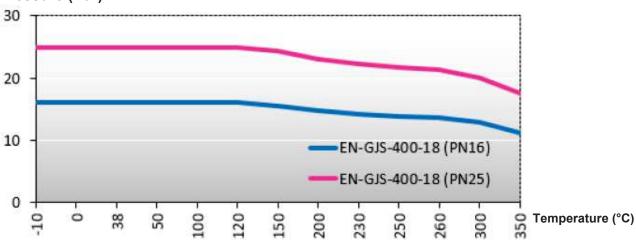

### RANGE:


• Ductile iron globe valve with stainless steel bellow flanged R.F. PN25 up to DN50, PN16 over Ref. 476 DN 15 to DN 200

## **MATERIALS**:

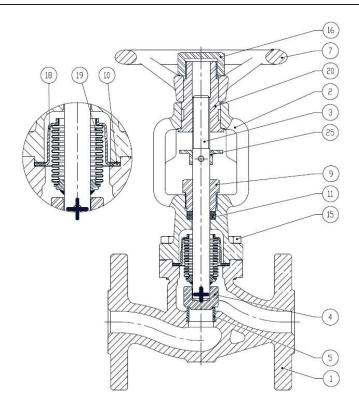


Item	Designation	Materials DN15-50	Materials DN65-200					
1	Body	Ductile iron EN GJS-400-18	Duetile into EN C 10 400 40					
2	Bonnet	EN 1.0619	Ductile iron EN GJS-400-18					
3	Stem	AISI 303	( 1.4305 )					
4	Disc	AISI 420	( 1.4021 )					
5	Seat	X 22 CrNi 1	7 ( 1.4059 )					
7	Handwheel	EN G	JS-400					
9	Gland	Steel EN 10087						
10	Gasket	Graphite						
11	Packing	Graphite						
15	Screw	Steel C35E						
16	Handwheel nut	Steel EN 10087						
18	Hood	AISI 303 ( 1.4305 )						
19	Bellow	AISI 316	AISI 316 Ti (1.4571)					
20	Threaded bushing	Steel EN 10087						
25	Anti turn device	Steel EN 10025						
	Lubricator	Brass						

### **DISC OPTIONS:**

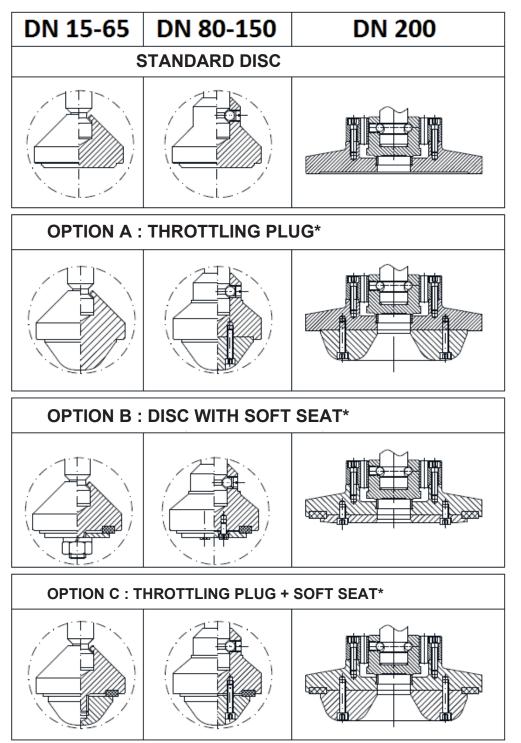


\*:ON REQUEST

# SIZE ( in mm ):

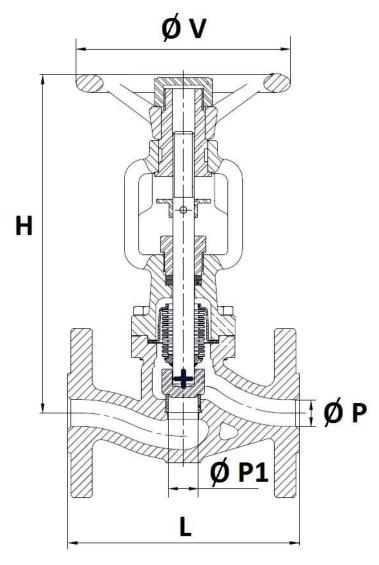

DN	15	20	25	32	40	50	65	80	100	125	150	200
L	130	150	160	180	200	230	290	310	350	400	480	600
Ø P	15	20	25	32	40	50	65	80	100	125	150	200
Ø P1	16.5	20.5	25.2	30	40.8	50.5	66	81	104.5	126	150.5	205
н	190	195	220	219	256	265	328	341	376	488	531	685
øν	120	120	140	140	180	180	200	200	250	275	275	400
Weight (Kg)	3.2	4.4	4.8	6.3	11	13	21.3	26.4	40	53.5	84	157
Ref.	476015	476020	476025	476032	476040	476050	476065	476080	476100	476125	476150	476200

## FLANGES SIZE ( in mm ):

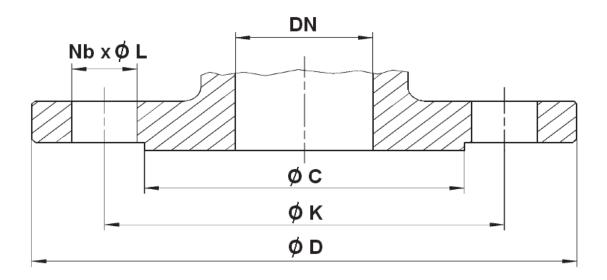

DN	15	20	25	32	40	50	65	80	100	125	150	200
øс	46	56	65	76	84	99	118	132	156	184	211	266
Ø D	95	105	115	140	150	165	185	200	220	250	285	340
øк	65	75	85	100	110	125	145	160	180	210	240	295
Nb x Ø L	4 x 14	4 x 14	4 x 14	4 x 19	4 x 19	4 x 19	4 x 19	8 x 19	8 x 19	8 x 19	8 x 23	12 x 23

### **STANDARDS:**

- Manufacturer certified ISO 9001 : 2015
- DIRECTIVE 2014/68/EU: CE N° 0035 Risk category III Module H
- Certificate 3.1 on request
- Designing according to DIN 3840
- Marking according to EN 19
- Pressure Tests according to EN 12266-1, Rate A
- Length according to EN 558 series 1 (DIN 3202-1 F1)
- Flanges R.F. according to EN 1092-2 PN16-PN25
- ATEX Group II Category 2 G/2Dc Zone 1 & 21 Zone 2 &22 (optional marking) according to directive 2014/34/EU

## **INSTALLATION INSTRUCTIONS**

### **GENERAL GUIDELINES:**

- Ensure that the valves to be used are appropriate for the conditions of the installation (type of fluid, pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate
  equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.
- Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).

#### **INSTALLATION INSTRUCTIONS:**

- Before installing the valves, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the valves.
- Ensure that both connecting pipes either side of the valve (upstream and downstream) are aligned (if they're not,the valves may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the valve unit will
  not absorb any gaps. Any distortions in the pipes may affect the thightness of the connection, the
  working of the valve and can even cause a rupture. To be sure, place the kit in position to ensure the
  assembling will work.
- If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the valve.
- Tighten the bolts in cross.
- It's recommended to operate the valve (open and close) 1 to 2 times per year
- Tighten the gland packing at the first start of the installation ( with a moderate torque ) so that there's no leakage and the handwheel is easy to operate.
- Do not use tools to operate the handwheel
- Respect the flow direction indicated by the arrow